
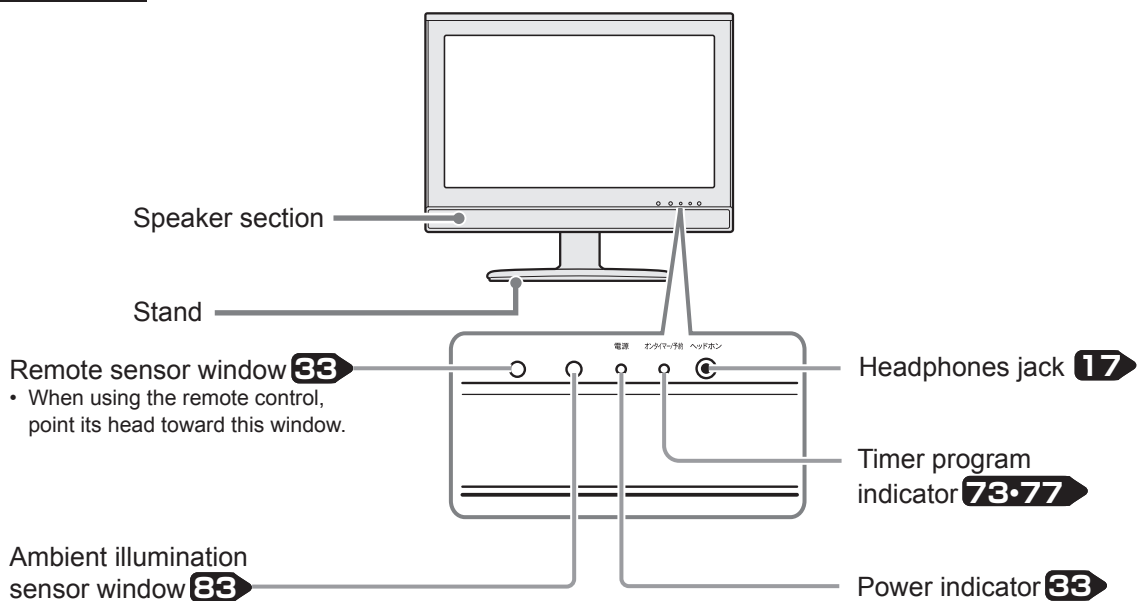


- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view




Adjusting the LCD panel angle

- The LCD panel can be tilted up to 2.5° forward, up to 10° backward and rotated horizontally up to 25° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Top view

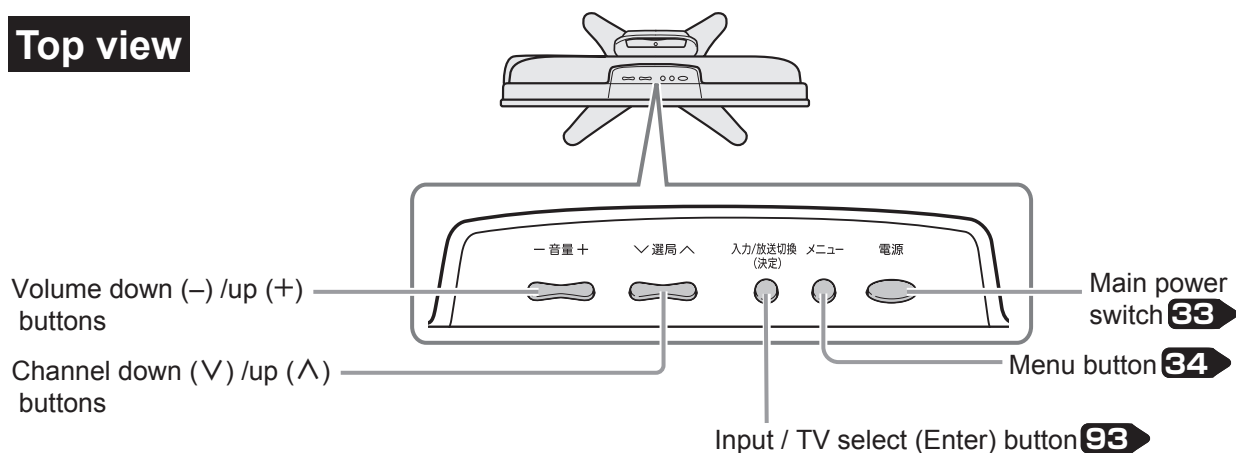


Side view

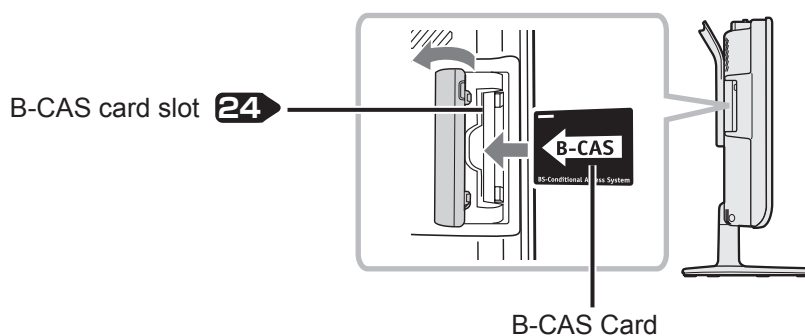

Back view

The illustrations below are those of LC-20E5.
LC-16E5 has the same layout of jacks and terminals as.

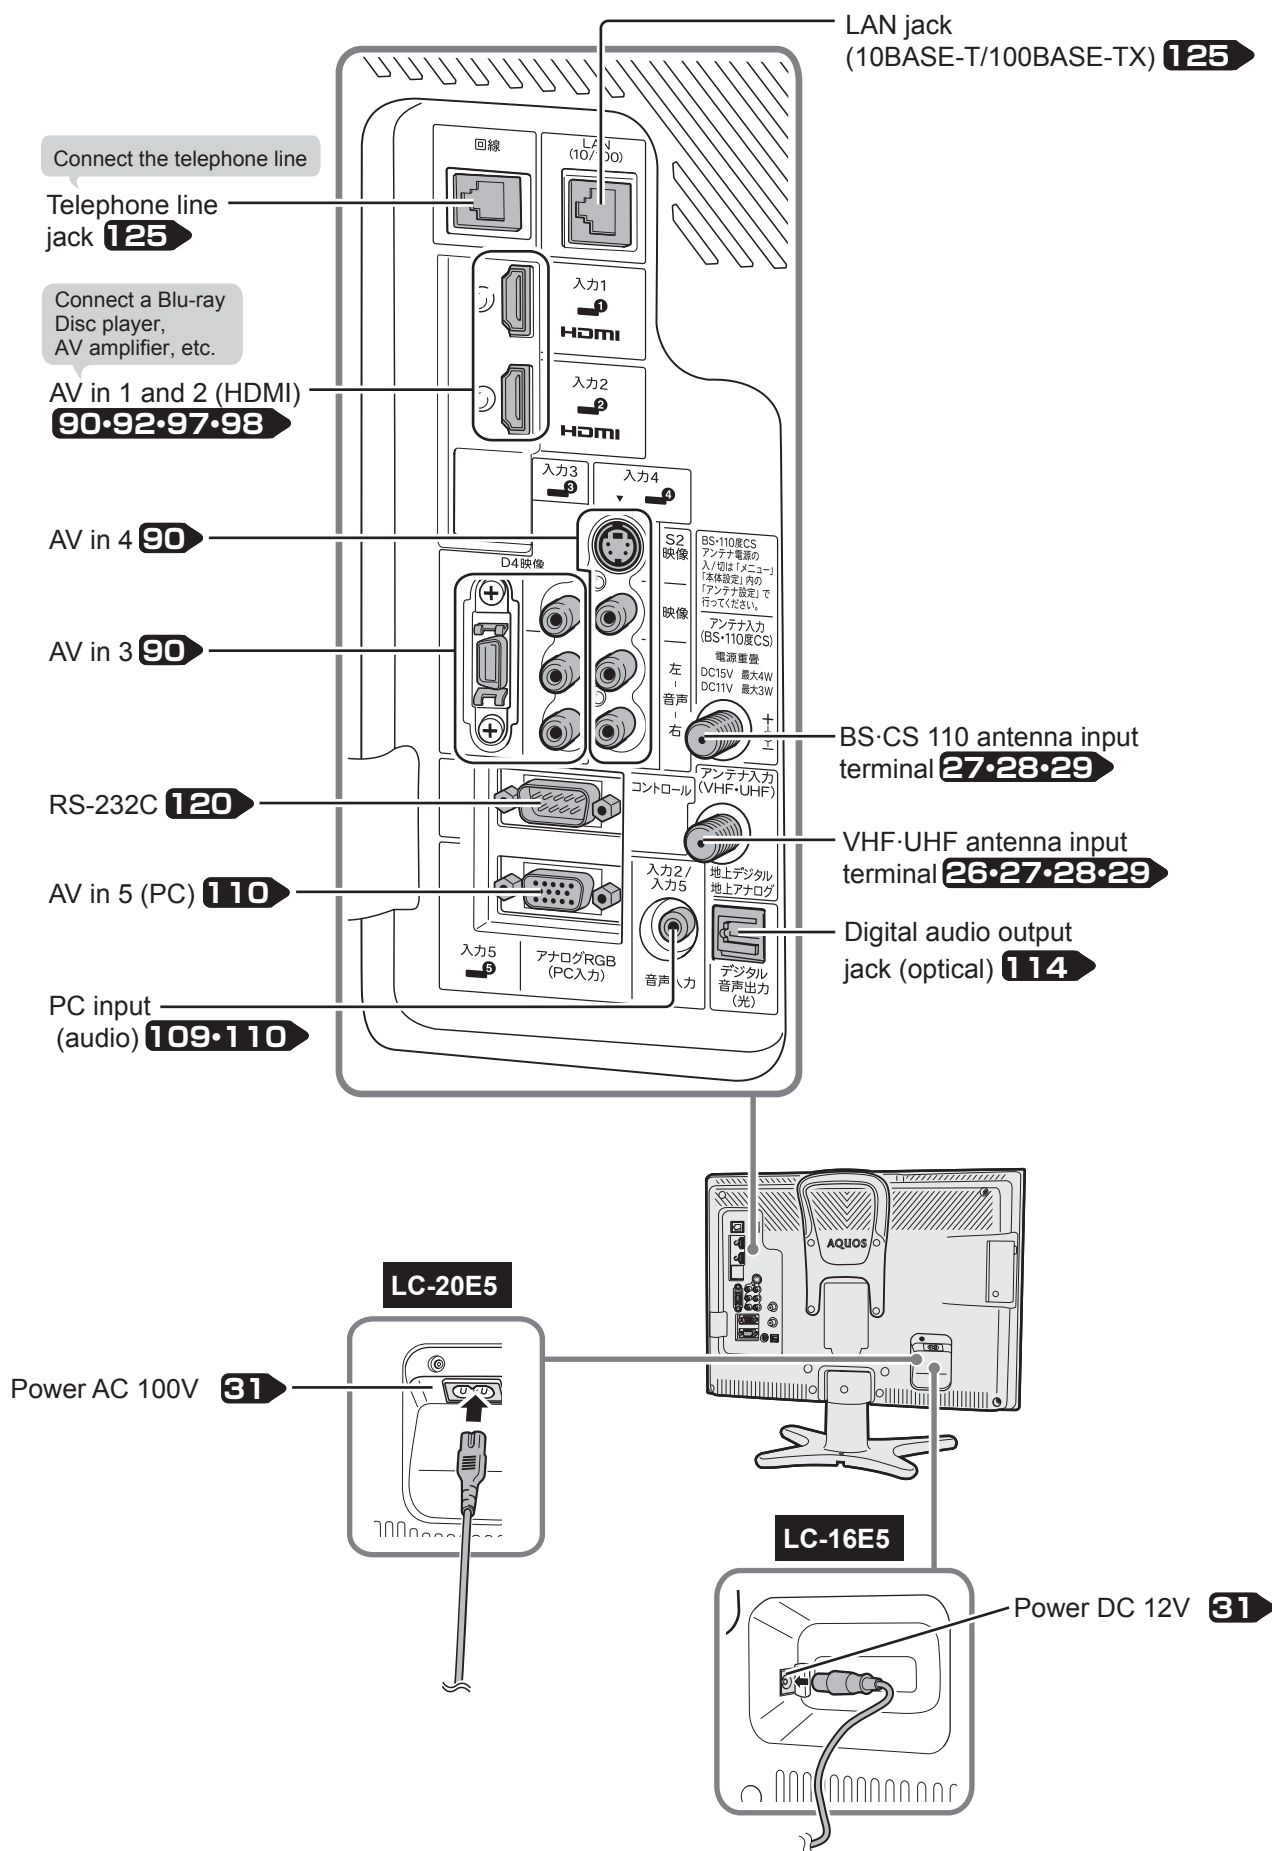

Part Names – Remote Control Unit

Active/Standby **33**

Press to engage the TV set in the active or standby mode.

CATV **63**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons 1-10/0)

Channel select **61**

- Press to select a channel.
- Use to input a number for various settings.

地上A Terrestrial analog select **60**

地上D Terrestrial digital select **60**

BS BS select **60**

CS CS select **60**

Select the CS digital channel for the first time. **39**

Linked data broadcast **65・76**

Press to call the data broadcast linked with the current digital TV program.

音量

+ Volume up (+)/down (-) **61**
Press to adjust the volume.

-

消音

Mute 61
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

番組情報

Program info 76
Press to display detailed information on the current digital program.

番組表

EPG 66・68
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

裏番組

Other on-air programs 67
Press to display the EPG for currently on-air programs only (裏番組).

Finish **34**

Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

画面サイズ Screen mode **79・111**

画面サイズ Press to select the desired screen mode.

AVポジション AV mode select **81**

AVポジション Press to select the picture/sound setting that best matches the current program.

静止

Freeze 78
Press to freeze the picture.

Favorite channel select/register **63**

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

Familink **104・106~108**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Display **62**

Press to display or turn off the channel call, etc.

オフタイマー

Sleep timer **131**

オフタイマー Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

3桁入力

Digital channel number input **63**

3桁入力 Use to select a digital channel by entering the 3-digit channel number.

Familink **104・106~108**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

選局 Channel up (^)/down (v) **61**

選局 Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

テレビ/データ

Media select **60**

テレビ/データ Press to select the desired media (TV or data).

入力切替

Input select **93**

入力切替 Press to select the desired input.

Menu **34**

Press to display or turn off the menu screen. *The menus can be displayed in English. See 163 for instructions on how to switch the display language.*

Cursor (up, down, left, right) **34**

Use to select a menu item, column, etc.

Enter/Confirm **34**

決定 Press to confirm a selected setting or menu item.

Return **34**

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Color **68・69**

Use to operate EPGs and data program screens.

Picture select **75**

映像切替 Press to select the desired picture when watching a digital multi-picture program.

字幕

Caption **75**

字幕 Press to display, select, or turn off captions when watching a digital program with captions.


音声切替

Audio select **74・75**

音声切替 Press to select the desired audio.

To open the cover

Hold the cover by the projections on both sides and lift upwards.

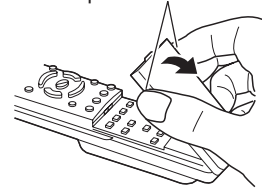

Switching the Display Language to English

メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。



お知らせ
誤ってメニューを英語にしてしまったときは

- ・メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

- 1** **Press** Display the menu screen.
メニューを表示する
- 2** Select “本体設定”(Setup)－“Language (言語設定)”.
「本体設定」－「Language (言語設定)」を選ぶ


Enter.
決定する

本体設定 ... Language (言語設定)

音声調整	省エネ設定	本体設定	機能切換
		かんたん初期設定 地域設定 チャンネル設定 アンテナ設定 視聴環境設定 (音声) 入力スキップ設定 位置調整 ④オートワイド 映像反転 [しない] クイック起動設定 [しない] Language (言語設定) [日本語] 時計設定 リモコン番号設定 [リモコン番号1] 個人情報初期化	

- 3** Select “English”.
「English」を選ぶ

Enter.
決定する

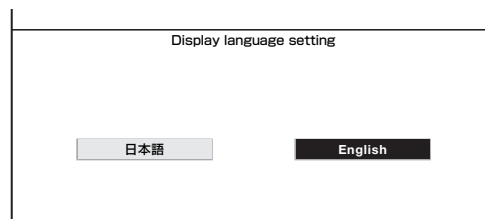

- ・ The menu screen is now displayed in English.
- ・ 画面表示が英語になります。

- 4** Finish this operation.
終了する

はじめに

準備

番組を見る

レコーダー・プレイヤー！
パソコンなどをつなぐ

ファミリンク
で録画・再生

本機の機能の
活用

故障かな・仕様・
寸法図など

English
Guide